


# Back Panel Adjustment Kit | BPAK-G / BPAK-B


4 - panel mounts



8 - #M5 x 12mm set screws

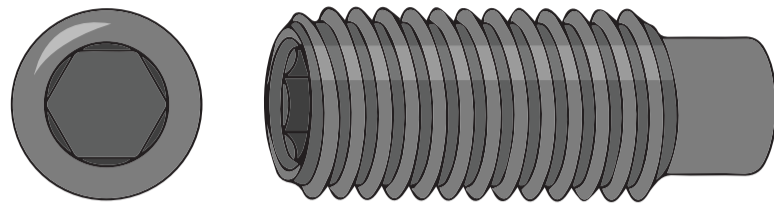

4 - #10-32 phillips head screws

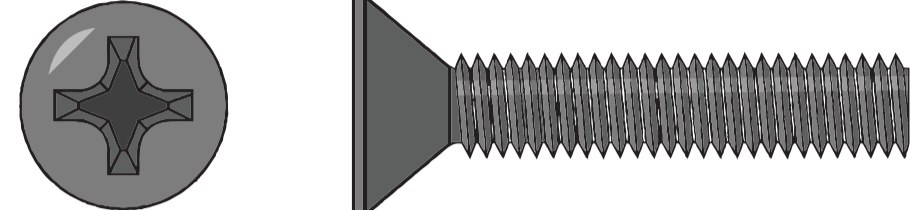

1 - allen wrench



## Installation Guide

**1**

Place set screw into the panel mount with a slight angle. Start the set screw with a few turns of the allen wrench.




**2**

With panel mount at desired depth, use allen wrench to tighten screw until panel mount is snug.



**3**

Slide the panel-mount onto the molded in t-rail located in each corner of the enclosure.

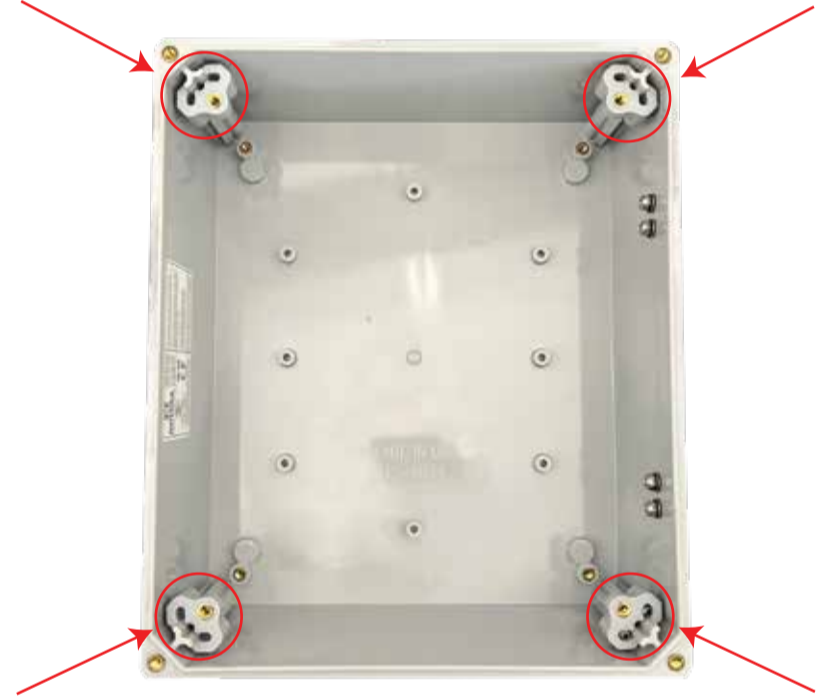

**4**


Install second set screw in each panel mount, on the opposite side of the rail.



Tip: Panel mount is secured when set screw tip is flush or extends past the bottom of the pad about 1/16"

**5**

This design supports the attachment of the panel mounts to the sub panel prior to installation into the enclosure.

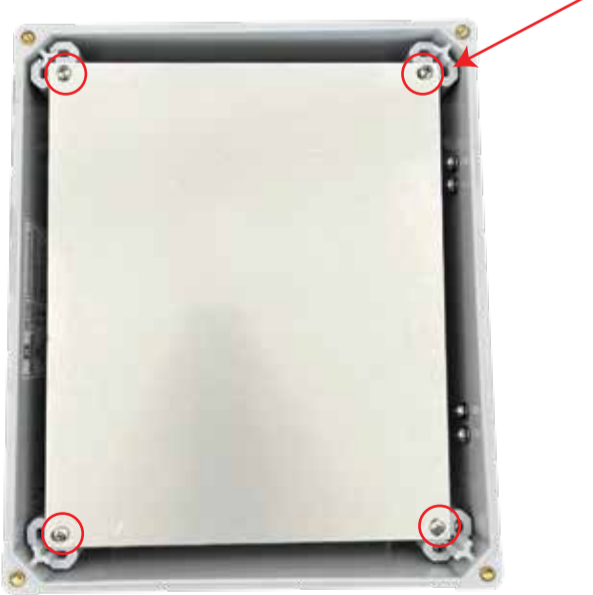

Just drop the assembly into the enclosure and tighten



**INTEGRA**  
ENCLOSURES